User manual

Index

1. Introduction
2. Contents of the box
3. Product overview
3.1 Button overview
3.2 Button function overview
3.3 LCD-Overview
3.4 PC Connection
3.5 Multimedia transfer
4. Usage
4.1 Turning the Optimuo MP4 player MP4 player on/off
4.2 Menu Modes
4.3 Music Mode
4.4 Music Mode Settings/Playback
4.5 Movie Mode
4.6 Movie Mode Settings/Playback
4.7 Record Mode
4.8 Record Mode Settings/Playback
4.9 Voice Mode
4.10 Voice Mode Settings/Playback
4.11 Picture Mode
4.12 Picture Mode Settings/Playback
4.13 Setup
4.14 E-Book Mode
4.15 E-Book Mode Settings/Playback
4.16 Trouble Shooting
4.17 Specifications

1. Introduction

Thank you for purchasing this Sweex product. Sweex devotes ample attention and care to the quality, reliability, functionality, durability and user friendliness of all its products. As a result of this, Sweex distinguishes itself in the market and would like you as a buyer to continue purchasing products of the Sweex brand. We hope you enjoy the Sweex product you have purchased.

An important extra advantage for you is product registration.

You can register the product online on www.sweex.com/productregistration.

By registering your product, Sweex offers you a number of important advantages. For example, if you so wish, you will be informed by Sweex of the latest product developments by our digital newsletter. Where applicable, you automatically receive the latest drivers and/or firmware updates from Sweex for the product you purchased to preserve or improve the compatibility and the performance. The Sweex support desk can assist you with any question you may haveregarding the product or products.

Precautions
Do not expose the product to extreme temperatures. Do not place the device in direct sunlight or in the direct vicinity of heating elements.Do not use the product in extremely moist or dusty surroundings. Protect the device against powerful shocks and falls – they may damage the internal electronics. Never attempt to open the device yourself – it will cause the warranty to lapse.

If you experience an issue that is not listed in this manual, please consult the frequently asked questions section of your product on the sweex.com website.

2. Contents of the box

Prior to using the Sweex Optimuo MP4 player MP4 player, check if all required parts are present.
The following parts must be present in the box:

Optimuo MP4 player

User manual

USB cable

Quick Installation Guide

Earphones

3. Product overview

Top

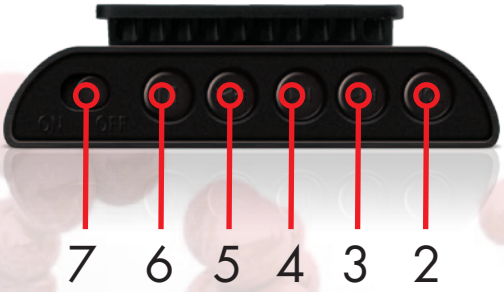

Bottom

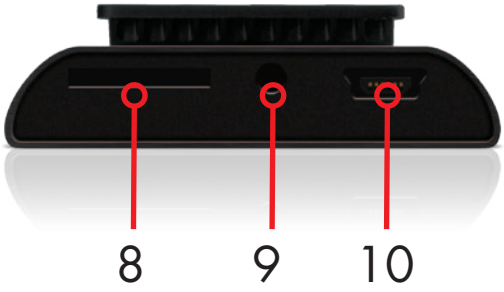

3.1 Overview

1. LCD (Main) Screen

Top Buttons

2. Adjust Volume
3. Forward
4. Play / Pause
5. Reverse / Back
6. Menu
7. On/Off

Bottom

8. MicroSD slot
9. Earphone input
10. USB 2.0 port

Back

11. Clip

Back

3. Product overview

3.2 Button function overview

PRESS ONCE
Previous Track/Menu Item

PRESS LONG
Fast Reverse

POWER ON/OFF

PRESS ONCE
Menu/Select

PRESS LONG
Return to main Menu

PRESS ONCE
Play/Pause

PRESS LONG
Soft On/Off

PRESS ONCE
Next Track/Menu Item

PRESS LONG
Fast Forward

PRESS ONCE
Change Volume
with buttons
⏮ ⏭

3.3 LCD-Overview

PC connection overview
(Also charge indication)

Main menu

- To save changed settings, change the needed settings and then press "Play / Pause " to shut down

3.4 PC connection

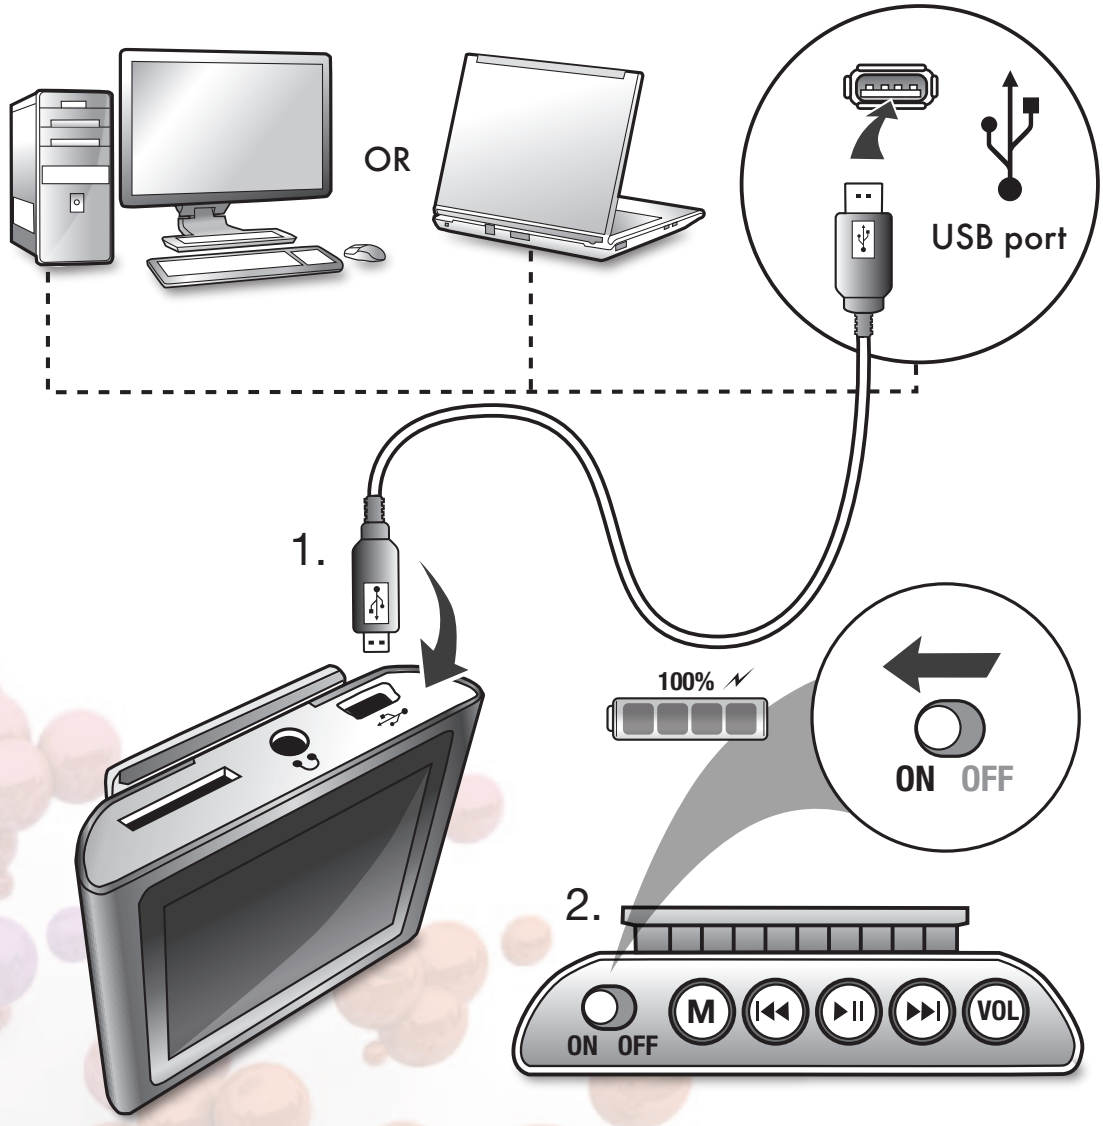

1. Connect the included USB cable to the Optimuo MP4 player MP4 player and to a free USB port
2. Switch the On/Off button to the "On" position

* Let the product charge until full

3.5 Multimedia transfer

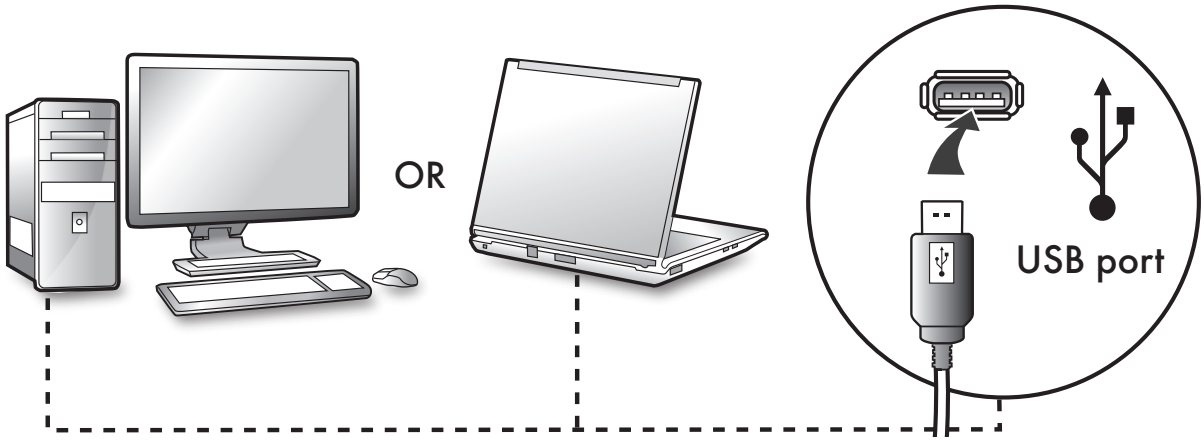

1. When connecting the Optimuo MP4 player MP4 player to a free USB port a “Autorun” menu will appear, choose the option “Open folder to view files”.
2. Drag and drop the Multimedia files from your PC to the Optimuo MP4 player

4. Usage

4.1 Turning the Optimuo MP4 player On/Off

1. Switch the On/Off button to the "On" position
2. Press and hold the "Play/Pause" button for 3 seconds

4.2 Menu Modes

After the Optimuo MP4 player MP4 player is started up there are 7 modes to choose from.

1. **Music Mode** (for playback of Music files)
2. **Movie Mode** (for playback of Movie files)
3. **Record Mode** (to record sound)
4. **Voice Mode** (to playback recorded sound)
5. **Photo Mode** (to view pictures)
6. **Setup** (general setup of the Optimuo MP4 player MP4 player)
7. **E-Book Mode** (to read text files)

4.3 Music Mode

When choosing the "Music Mode" from the main screen the music player will open.

1. File type
2. Equalizer setting
3. Playback mode
4. Volume
5. Battery indicator
6. Amount of tracks
7. Storage location
8. Track name
9. Playback time
10. Remaining time
11. Lyric indicator
12. Bitrate of track

4.4 Music Mode Settings/Playback

When in the "Music mode" press the "M" button on the Optimuo MP4 player MP4 player to open the settings of the "Music mode".

The following options are presented during "no media playback"

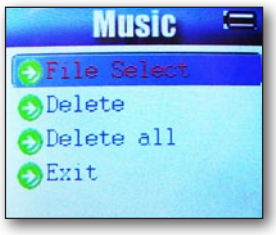

1. **File Select** (Scroll through the folders located on the player and select a track)
2. **Delete** (Choose the file you wish to delete on the player)
3. **Delete All** (Delete all files on the player)
4. **Exit** (Return to the Music mode screen)

When a track is selected and is being played the following option are presented when pressing the "M" button located on the Optimuo MP4 player MP4 player:

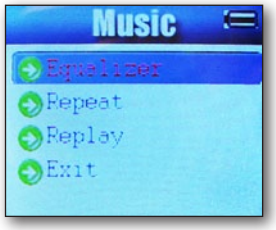

1. **Equalizer** (Natural/Pop/Rock/Classic/Jazz/Soft/DBB audio enhancements)
2. **Repeat** (Normal/Repeat one/Repeat all)
3. **Replay** (Replay the media file being played back)
4. **Exit** (Return to the Music mode screen)

To playback a music file press the "M" button on the Optimuo MP4 player MP4 Player and select "File select". The track will playback after selecting the media file.
Please refer to chapter 3.2 for the button operation during playback.

- To Playback lyrics press and hold the "M" button untill the lyrics come onscreen.

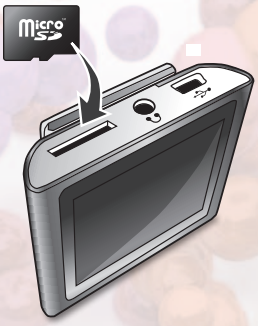

- To choose between the "SD card" or the "NAND flash" press "M" when no media file is played/being recorded.

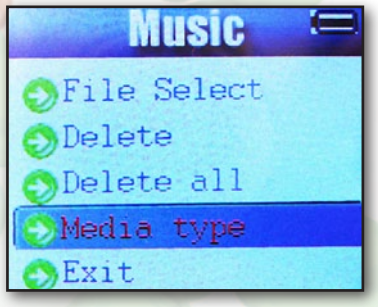

Choose the option "Media type" and here you can select the storage preferred.

4.5 Movie Mode

When choosing the “Movie Mode” from the main screen the movie player will open.

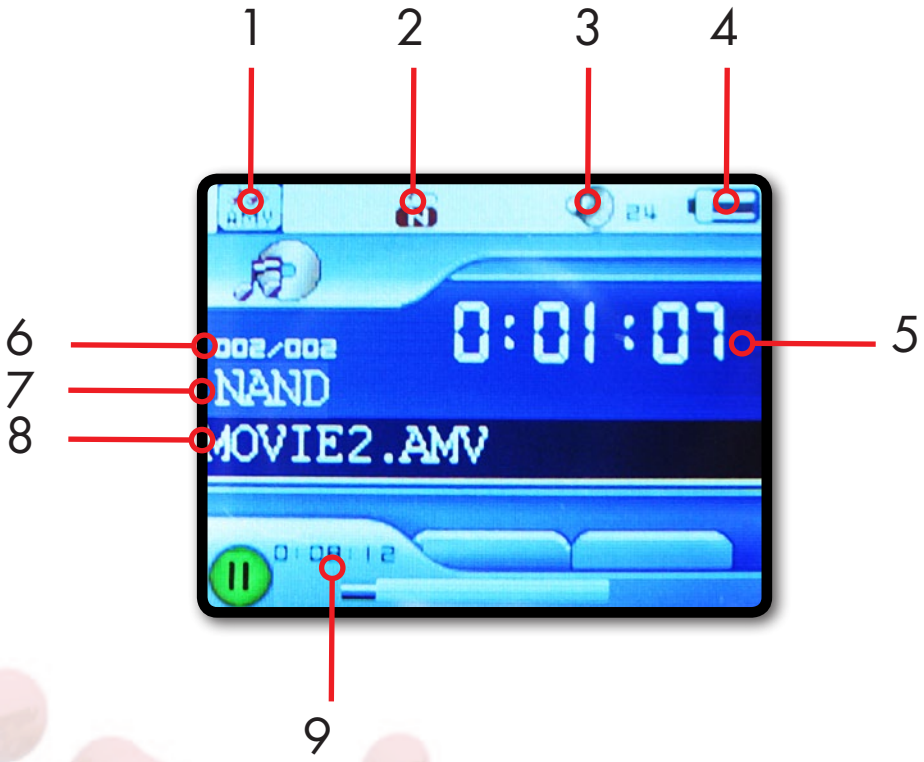

1. File type
2. Playback mode
3. Volume
4. Battery indicator
5. Playback time
6. Amount of tracks
7. Storage location
8. Track name
9. Remaining time

4.6 Movie Mode Settings/Playback

When in the "Movie mode" press the " M" button on the Optimuo MP4 player MP4 player to open the settings of the " Movie mode".

The following options are presented during "(no) media playback"

1. **File Select** (Scroll through the folders located on the player and select a track)
2. **Repeat** (Normal/Repeat one/Repeat all)
3. **Delete** (Choose the file you wish to delete on the player)
4. **Delete All** (Delete all files on the player)
5. **Exit** (Return to the Music mode screen)

To playback a music file press the "M" button on the Optimuo MP4 Player and select "File select". The track will playback after selecting the media file.

Please refer to chapter 3.2 for the button operation during playback.

4.7 Record Mode

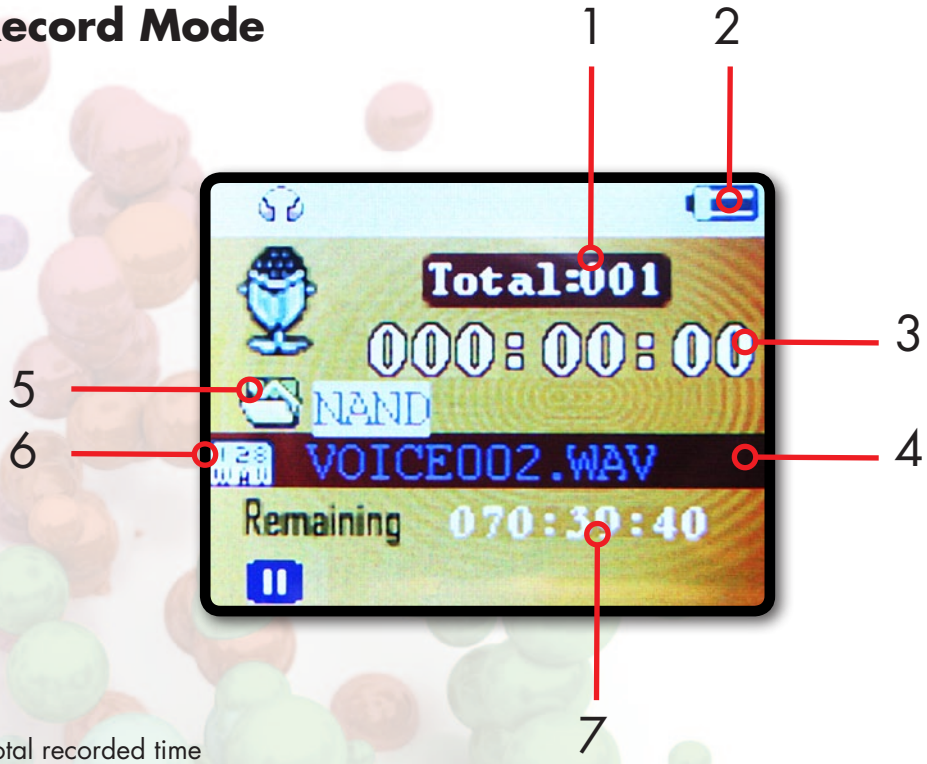

1. Total recorded time
2. Battery indicator
3. Recorded time
4. Track name
5. Storage location
6. Bitrate
7. Remaining recording time

4.8 Record Mode Settings/Playback

When in the " Record mode" press the " M" button on the Optimuo MP4 player MP4 player to open the settings of the " Record mode".

The following options are presented during "no recording"

1. **REC type** (Long REC 32K / Fine REC 128K)
2. **Exit** (Return to the Recording mode)

To record voice recordings press the "Play/Pause" button when in the Record mode, press the "Play/Pause" button again to stop recording.
To save the recording press and hold the "M" button until "saving" is shown and you are returned to the main menu.

4.9 Voice Mode

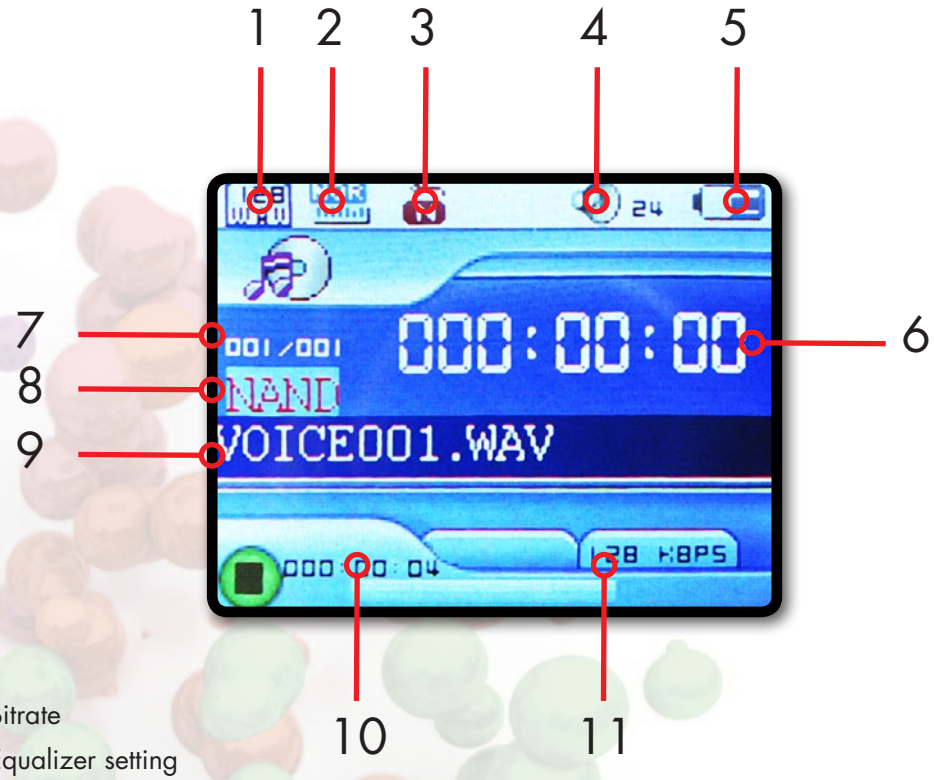

1. Bitrate
2. Equalizer setting
3. Playback mode
4. Volume
5. Battery indicator
6. Playback time
7. Amount of tracks
8. Storage location
9. Track name
10. Remaining time
11. Bitrate of track

4.10 Voice Mode Settings/Playback

When in the "Voice mode" press the " M" button on the Optimuo MP4 player MP4 player to open the settings of the "Voice mode".

The following options are presented during "(no) media playback"

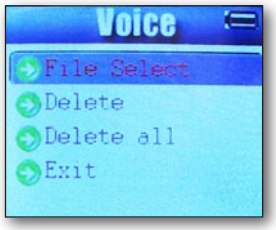

1. **File Select** (Scroll through the folders located on the player and select a track)
2. **Delete** (Choose the file you wish to delete on the player)
3. **Delete All** (Delete all files on the player)
4. **Exit** (Return to the Music mode screen)

To playback a music file press the "M" button on the Optimuo MP4 player MP4 Player and select "File select". The track will playback after selecting the media file.

Please refer to chapter 3.2 for the button operation during playback.

4.11 Picture Mode

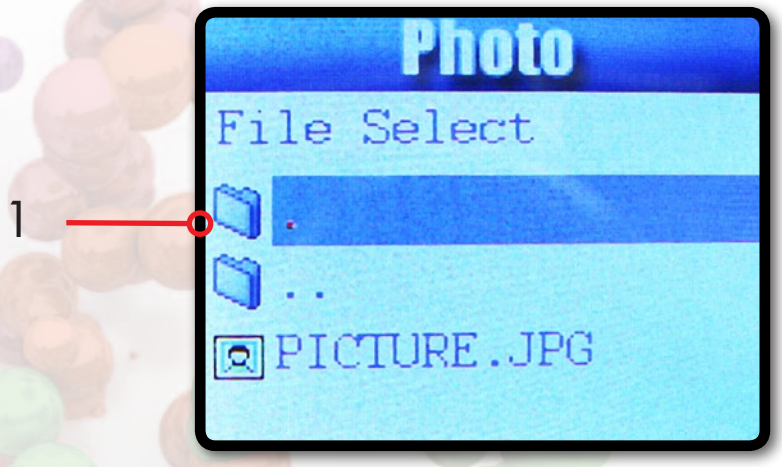

1. Picture selection (choose a picture file and the picture will be displayed)

4.12 Picture Mode Settings/Playback

When in the "Picture mode" press the " M" button on the Optimuo MP4 player MP4 player to open the settings of the "Picture mode" during playback.

1. **File Select** (Scroll through the folders located on the player and select a track)
2. **Play set** (Manual/Auto play)
3. **Temporate** (1-10)
4. **Delete** (Choose the file you wish to delete on the player)
5. **Delete All** (Delete all files on the player)
6. **Exit** (Return to the Music mode screen)

To playback a picture file press the "M" button on the Optimuo MP4 Player when the picture is highlighted.

4.13 Settings

1. **LCD Set** (Black/Exit)
2. **Language** (Select the preferred language)
3. **Power off** (turn off the device)
4. **Memory info** (shows the status of the memory)
5. **Exit** (return to menu)

4.14 E-Book Mode

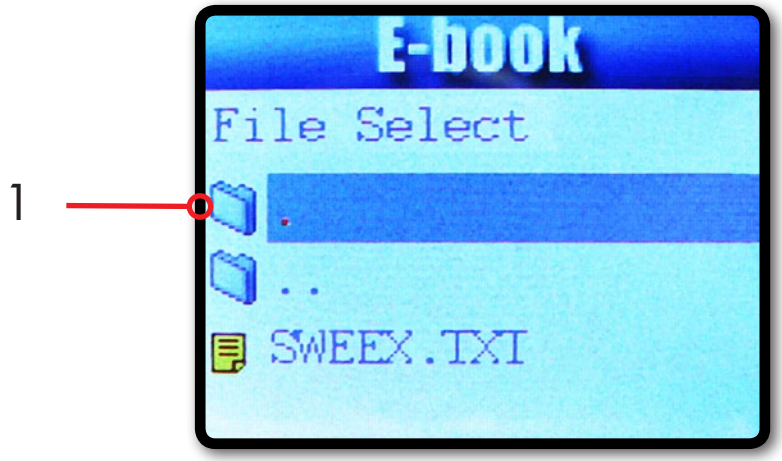

1. Text selection (choose a text file and the text will be displayed)

4.15 E-Book Mode Settings/Playback

When in the "E-Book mode" press the "M" button on the Optimuo MP4 player MP4 player to open the settings of the "E-Book mode" during playback.

1. **File Select** (Scroll through the folders located on the player and select a track)
2. **Play set** (Manual/Auto play)
3. **Temporate** (1-10)
4. **Delete** (Choose the file you wish to delete on the player)
5. **Delete All** (Delete all files on the player)
6. **Exit** (Return to the Music mode screen)

To playback a picture file press the "M" button on the Optimuo MP4 player MP4 Player when the picture is highlighted.

4.16 Trouble shooting

Symptom:	Solution:
My player does not charge	Turn the switch to “ON” and connect to PC
My player does not function	Press and hold the “Play/Pause” button
No sound is played back	Check the volume setting of the player
Nothing happens when connected to PC	Try different USB ports
My microSD is not detected	Make sure the microSD is formatted in the “FAT32” file system.

4.17 Specifications:

MEMORY CAPACITY
4 GB

CONNECTIONS
USB 2.0 (to computer)
3.5 mm jack (to earphones)
MicroSD card reader

STANDARDS SUPPORTED
USB Mass Storage Device Class

SUPPORTED FORMATS
Audio: MP3, WMA (without DRM), OGG, AAC, MP2, MP1.
Video: AMV
Pictures: JPG, BMP, GIF
Text: TXT, LRC (for lyrics)
Recording: WAV, MP3

DISPLAY
1.8” TFT
160 x 128 pixels
262 k colours

EARPHONES
Frequency response: 20 Hz to 20 kHz
Impedance: 32 Ohm
Sensitivity: 110 dB @ 1 mW
Max. SPL: 121 dB
Colour: black

BATTERY AND POWER
Type: Li-Poly
Capacity: 240 mAh
Run time (music): up to 8.7 hours
Run time (video): up to 3 hours
Charge time via USB: approx 3 hours

ADVANCED FEATURES
Voice recording
7 equalizer presets
Repeat Once, Repeat all
Lyrics support

ADDITIONAL SPECIFICATIONS
Output voltage: 600 mV RMS max.
19 menu languages: English, Trad Chinese, Simple Chinese, Japanese, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish, Russian, Turkish, Hebrew, Thai, Korean, French

CABLING
USB cable length: 60 cm
Earphones cable length: 130 cm

DIMENSIONS AND WEIGHT
51 x 44 x 15 mm (h x w x d),

Sweex warranty conditions.

2-year standard warranty within the EU

- In a standard manner a warranty period of 2 years as from the purchase date is available for this Sweex product within the EU.
- Should you wish to invoke this warranty within the first 2 years after the purchase then you can directly apply to the point of sale where you purchased the product for the conditions and procedures.

10-year manufacturer's warranty

- However, in addition to the statutory 2-year standard warranty Sweex offers you an extended quality warranty of no less than 10 years, if you purchased your product within the EU.
- For more information, conditions and the registration form go to www.sweex.com/12yearswarranty and register within 30 days after the purchase of your product for the extended warranty period of in total 12 years.

Matters that are excluded from the warranty

- The warranty of Sweex only covers manufacturing defects. Excluded from the warranty are accessories like batteries, rechargeable batteries and also supplied software, where applicable.
- The liability of Sweex is limited to the costs of repair and/or replacement of the product covered by the warranty.
- Both warranty types (the 2-year standard warranty and the 10-year extended manufacturer's warranty) are null and void if the product has been opened, changes have been made, physical damage was caused to the product and if the product is used for another purpose than for which it is originally meant.

All brand names and associated rights mentioned in this manual are and remain the sole property of the rightful claimant.